

MINI PEDAL PUMP

With the mini pedal pump you can swell bicycles, cars, motorbikes and ultra-light aircraft.

With suitable adapters it is also possible to swing sports articles and toys or mattresses.

The integrated high pressure stage serves to regulate the pressure in pneumatic organs of motorcycles and bicycles.

Endowment:

- Pump with hose and valve connection with digital gauge
- Ball Inflation Needle (at the base of the pump)
- Adapters for mattresses (at the base of the pump)
- Dunlop valve adapter (in the dust cap)
- Nylon bag

Details:

- Digital pressure gauge with LCD display
- Multifunction connector
- Manometer with valve connection
- Maximum pressure 12 bar
- Indication in bar, psi, KPa, Kg / cm²
- High capacity sector for large volume volumetric swing
- High pressure range, for pressures up to 12 bar
- Automatic insertion

Adapters selection

- Automatic valve: large opening in valve connection
- Dunlop valve: Dunlop adapter in the opening of the valve attachment
- Scloverand valve: small opening in the valve attachment
- Adapter for balloons and mattresses: large opening in the valve attachment

Pumps:

- 1- Choose the valve attachment or the adapter
- 2- Insert the pressure gauge by pressing the button
- 3- Repeatedly press the button until the desired unit is displayed
- 4- Place the valve head on the valve and close the lava at the top
- 5- Lower the bracket and place the pump on the floor
- 6- Using the foot, operate the piston of the pump until the desired pressure is reached
- 7- Move the lava to the valve attachment in the direction of the hose and extract the valve attachment or the adapter

Setting the selector

The mini pump can work in two ways:

1. The high capacity switch (bottom pedal position) is used for rapid inflation. For most applications, this selector must be used.
2. The high pressure switch (high pedal position) is used to generate pressures up to 12 bar. To regulate the pressure of elastic organs of bicycles or motorcycles, this sector is used. For more information, refer to the vehicle documentation.

Replacing the battery

When activating the warning symbol on the display, replace the battery. Open the battery compartment cover with the help of a coin and take the battery. Insert a new battery (CR2032). The battery must be dry and free from grease, the poles should not be attached to the unit. Close the cover. Press the insertion button until StA appears on the display.